

# www.danrec.eu



### Contact

Phone +45 97 100 200

Email: danrec@danrec.dk

Vandværksvej 5, DK-7470 Karup J


## **Opening Hours**

Monday-thursday: 08:00 - 15:00.

Friday: 08:00 - 12:00.

Saturday: Closed.

Sunday: Closed.

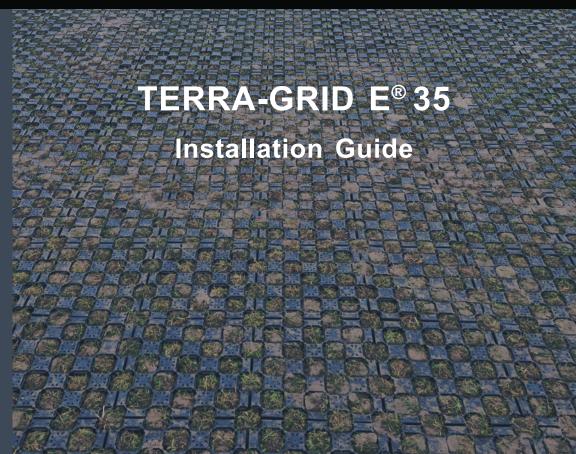



#### STEP 1

The grass should be trimmed as short as possible prior to installation.


(If installing on soil, skip this step)



#### STEP 4

Use a plate vibrator or drum compactor to push the E35 into the ground.

(When using a drum compactor, drive onto the E35 at an angle. Straight on could lead to the connections being broken between the places E35)

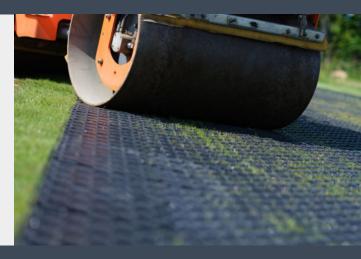

#### STEP 2

If the soil is hard and dry, water the installation area to soften up the soil.

(Ensure the soil is soft enough to allow a finger to sink 4–5 cm into it before installation.)



STEP 5 (Optional)

Install your big or small markers.



#### STEP 3

Place and connect the preconnected sheets of E35 on the designated area.



#### STEP 6

Enjoy your new

- Parking area
- Access roads
- Airstrip

